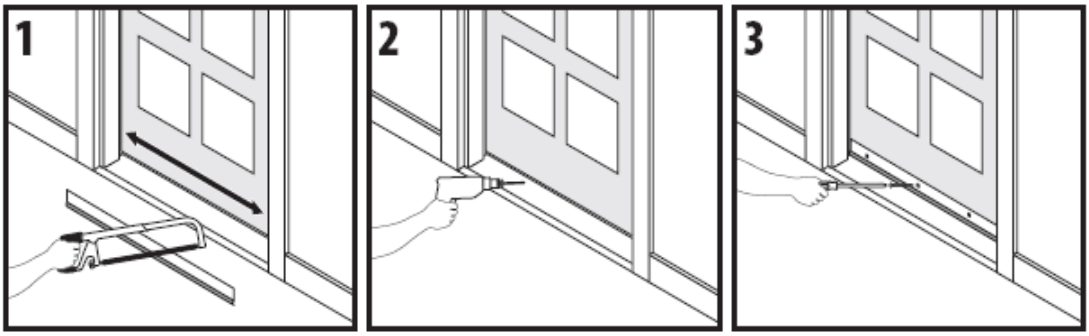

INSTALLATION:

1. Measure width of door and cut door sweep to length. Cut metal with hacksaw and vinyl with scissors.
2. With door closed, position door sweep at inside bottom of door with vinyl seal lightly touching threshold. Drill pilot holes for screws in center of holes.
3. Attach door sweep with enclosed screws. Before tightening of screws, adjust sweep with seal resting lightly against threshold.

INSTALACIÓN:

1. Mida el ancho de la puerta y corte la barredora a esa medida. Corte el filete metálico con una segueta y el vinilo con tijera.
2. Con la puerta cerrada, coloque la barredora en el borde inferior interior de la puerta con el sello de vinilo tocando el sardinel levemente. Taladre orificios piloto para los tornillos en el centro de los orificios.
3. Instale la barredora con los tornillos provistos. Antes de ajustar los tornillos, alínee la barredora con el sello apoyando ligeramente contra el sardinel.